

STARTING SYSTEM

GENERAL

STARTING SYSTEM BASICS

Conditions for Engine Starting

- Emergency engine stop switch set to RUN;
- Valid RFID key installed.

Starting System Operation

Refer to *REWIND STARTER* subsection for starting system operation.