

# PERIODIC MAINTENANCE SCHEDULE

Procedures are detailed in *PERIODIC MAINTENANCE PROCEDURES* subsection.

**550F**

EVERY 3 000 KM (2,000 MI) OR 1 YEAR (WHICHEVER COMES FIRST)
Inspect engine rubber mounts
Inspect exhaust system and check for leaks
Adjust engine stopper
Visually inspect and clean drive pulley
Tighten drive pulley retaining screw to specified torque
Clean driven pulley
Adjust and align track
Inspect brake hose, pads and disk
Inspect steering mechanism
Inspect front suspension
Inspect rear suspension and stopper strap
Lubricate rear suspension (lubricate whenever the vehicle is used in wet conditions (rain, puddles))
EVERY 6 000 KM (4,000 MI) OR 2 YEARS (WHICHEVER COMES FIRST)
Inspect fuel pump strainer and replace if necessary
Replace brake fluid
Inspect throttle cable
Clean and lubricate rewind starter

---

## Subsection XX (PERIODIC MAINTENANCE SCHEDULE)

---

### *600 HO E-TEC*

EVERY 3 000 KM (2,000 MI) OR 1 YEAR (WHICHEVER COMES FIRST)
Inspect heat shields
Inspect engine rubber mounts
Inspect exhaust system and check for leaks
Adjust engine stopper
Visually inspect and clean drive pulley
Tighten drive pulley retaining screw to specified torque
Clean driven pulley
Adjust and align track
Inspect brake hose, pads and disk
Inspect steering mechanism
Inspect front suspension
Inspect rear suspension and stopper strap
Lubricate rear suspension (lubricate whenever the vehicle is used in wet conditions (rain, puddles))
EVERY 6 000 KM (4,000 MI) OR 2 YEARS (WHICHEVER COMES FIRST)
Inspect fuel pump strainer and replace if necessary
Replace brake fluid
Inspect throttle cable
Clean and lubricate rewind starter
EVERY 10 000 KM (6,000 MI) OR 3 YEARS (WHICHEVER COMES FIRST)
Replace spark plugs (must be replaced by an authorized Ski-Doo dealer)
Inspect oil pump strainer and clean if needed
EVERY 5 YEARS
Replace engine coolant
Replace in-line fuel filter

## Subsection XX (PERIODIC MAINTENANCE SCHEDULE)

### 600 ACE

EVERY 3 000 KM (2,000 MI) OR 1 YEAR (WHICHEVER COMES FIRST)
Inspect heat shields
Visually inspect and clean drive pulley
Tighten drive pulley retaining screw to specified torque
Clean driven pulley
Check driven pulley preload
Adjust and align track
Inspect brake hose, pads and disk
Inspect steering mechanism
Inspect front suspension
Inspect rear suspension and stopper straps
Lubricate rear suspension. Lubricate whenever the vehicle is used in wet conditions (rain, puddles)
EVERY 6 000 KM (4,000 MI) OR AT PRE-SEASON (WHICHEVER COMES FIRST)
Change engine oil and filter
EVERY 6 000 KM (4,000 MI) OR 2 YEARS (WHICHEVER COMES FIRST)
Replace fuel pump outlet filter
Replace brake fluid
Inspect throttle cable
EVERY 10 000 KM (6,000 MI) OR 3 YEARS (WHICHEVER COMES FIRST)
Replace spark plugs
EVERY 5 YEARS
Replace engine coolant