

PERIODIC MAINTENANCE SCHEDULE

Procedures are detailed in *PERIODIC MAINTENANCE PROCEDURES* subsection.

EVERY 1 500 KM (1,000 MI)
Adjust drive chain
Check chaincase oil level
EVERY 3 000 KM (2,000 MI) OR 1 YEAR (WHICHEVER COMES FIRST)
Inspect engine rubber mounts
Inspect exhaust system and check for leaks
Visually inspect and clean drive pulley
Tighten drive pulley retaining screw to specified torque
Clean driven pulley
Adjust and align track
Inspect brake hose, pads and disk
Inspect steering mechanism
Inspect front suspension
Inspect rear suspension and stopper strap
Lubricate rear suspension (lubricate whenever the vehicle is used in wet conditions (rain, puddles))
EVERY 6 000 KM (4,000 MI) OR 2 YEARS (WHICHEVER COMES FIRST)
Replace in-tank fuel strainer
Replace brake fluid
Inspect throttle cable
Clean and lubricate rewind starter
EVERY 10 000 KM (6,000 MI) OR 3 YEARS (WHICHEVER COMES FIRST)
Replace injection oil filter